




# HP Envy 15-u001dx Hard Drive Replacement

This guide shows you how to get to and remove your hard drive.

Written By: Dakota Presley

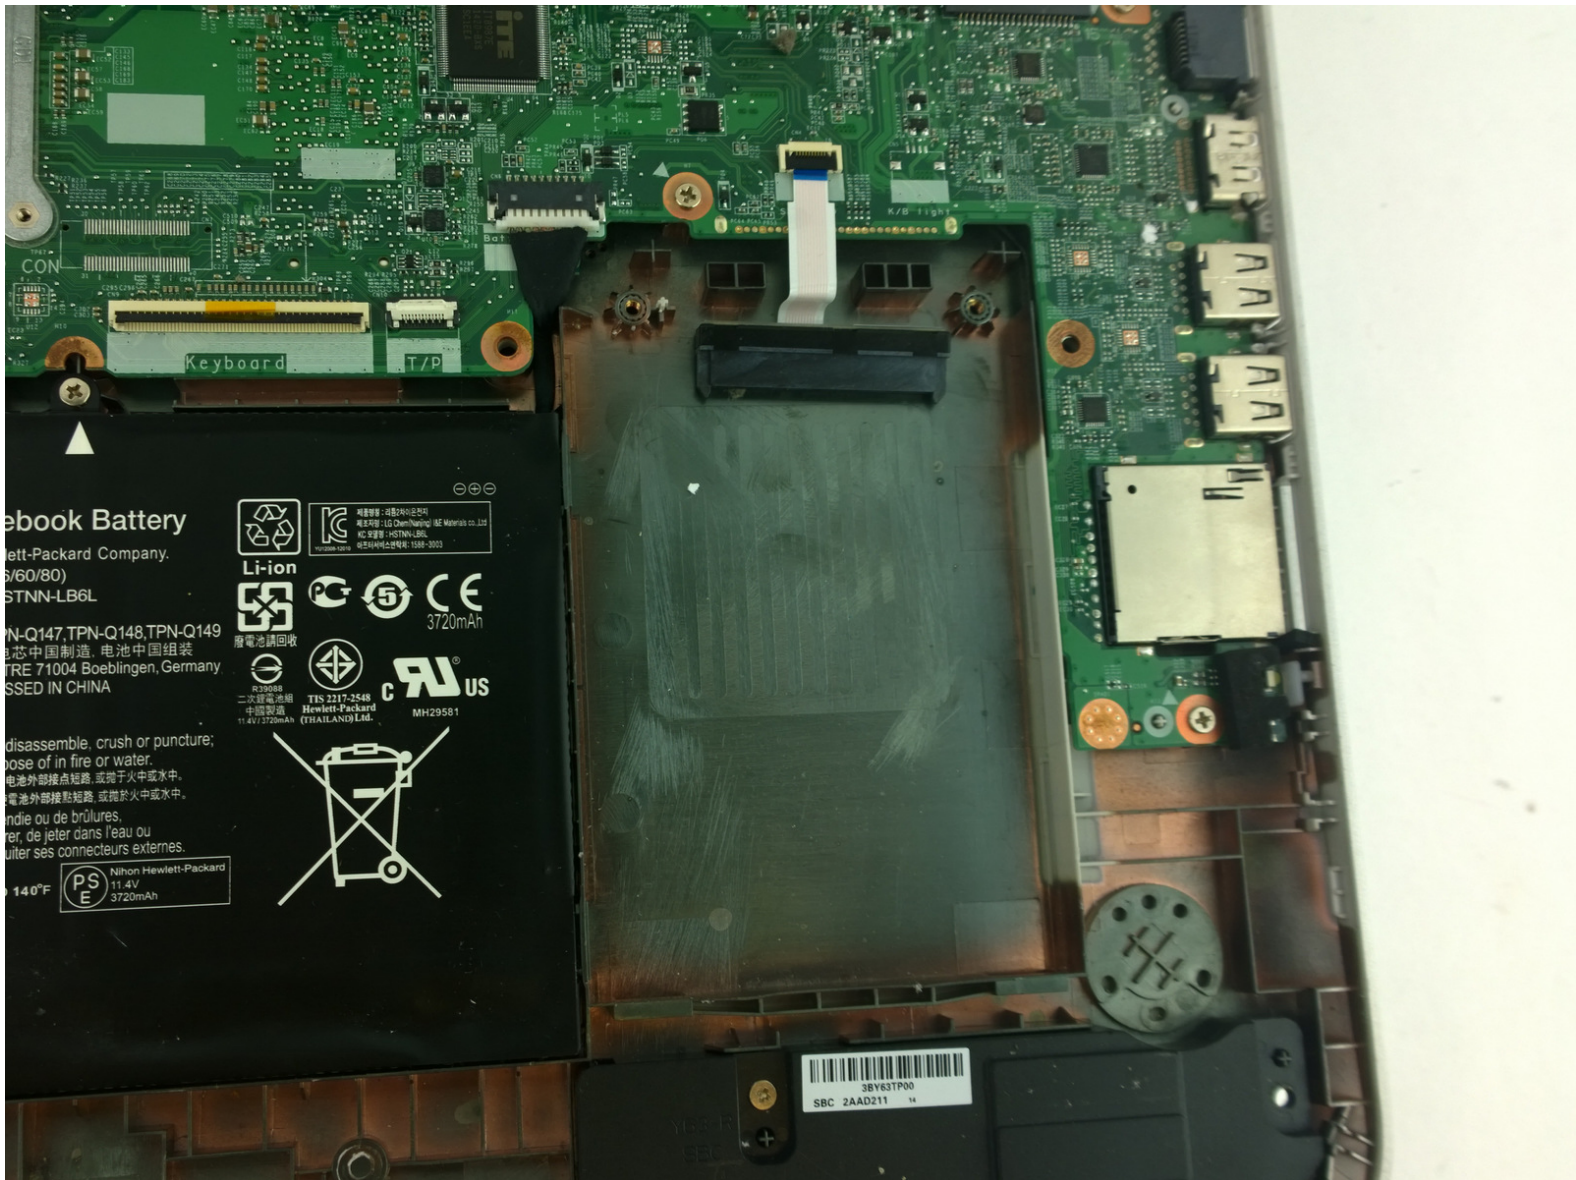

## INTRODUCTION


The hard drive is responsible for storing all of the data on your laptop. Information from a defective hard drive can sometimes be recovered depending on the extent of the damage or problem.

---

### TOOLS:


- [Spudger](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — HP Envy 15-u001dx Disassembly

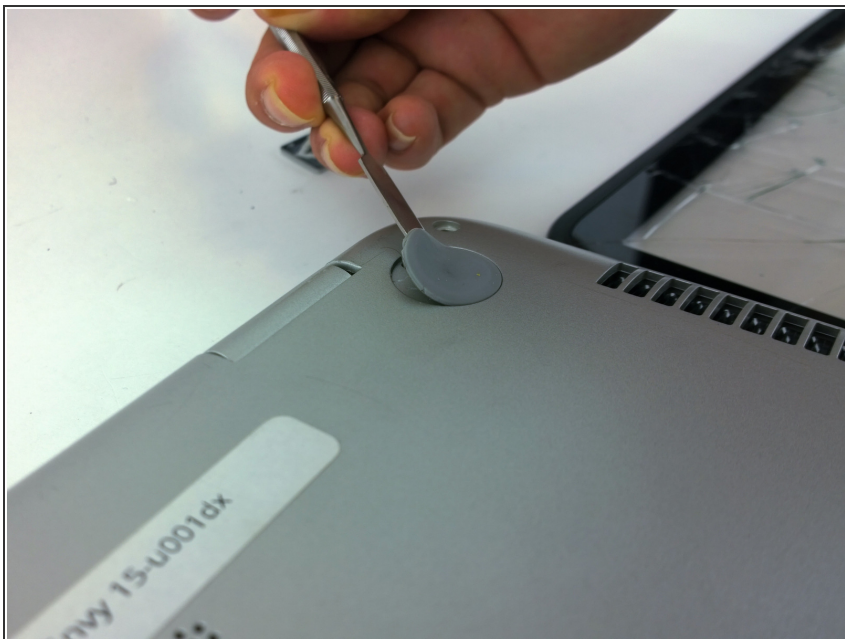

- Remove the two no-slip covers on the rear, bottom side using spudger shown in top center of picture.
- ⓘ The two in the front do not have to be removed as there are no screws underneath them.

## Step 2

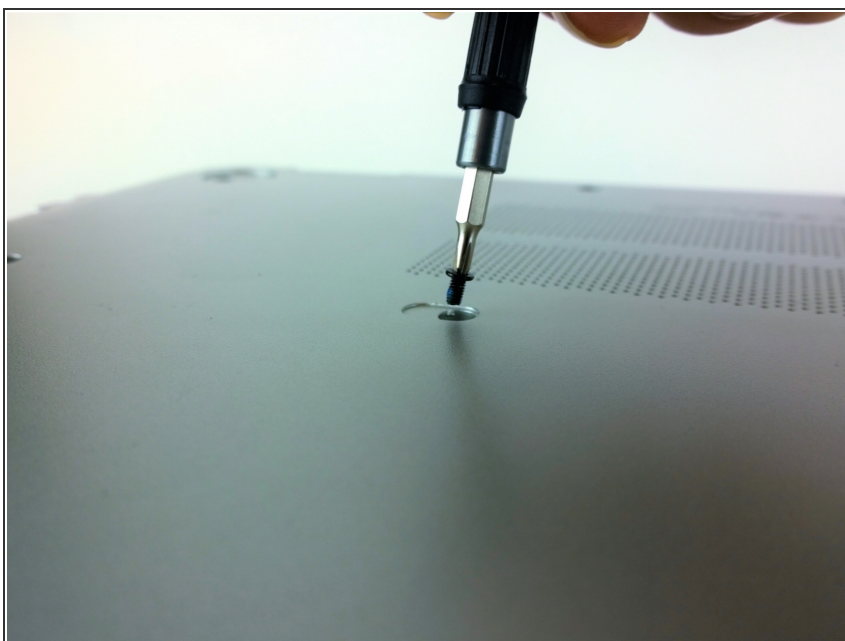

- Remove the two cover tabs towards center of the bottom as there are screws underneath them.



## Step 3





- Remove all fourteen 4.5 mm screws from the bottom using a Phillips #0 screwdriver. Each location is marked by a red circle in the picture.

## Step 4




- Separate the top cover by using a spudger to go around the sides freeing the inside latches.
- ⚠ Once the bottom is free, carefully open to the inside as there are two ribbons that connect your keyboard and touch pad to the top cover.

## Step 5

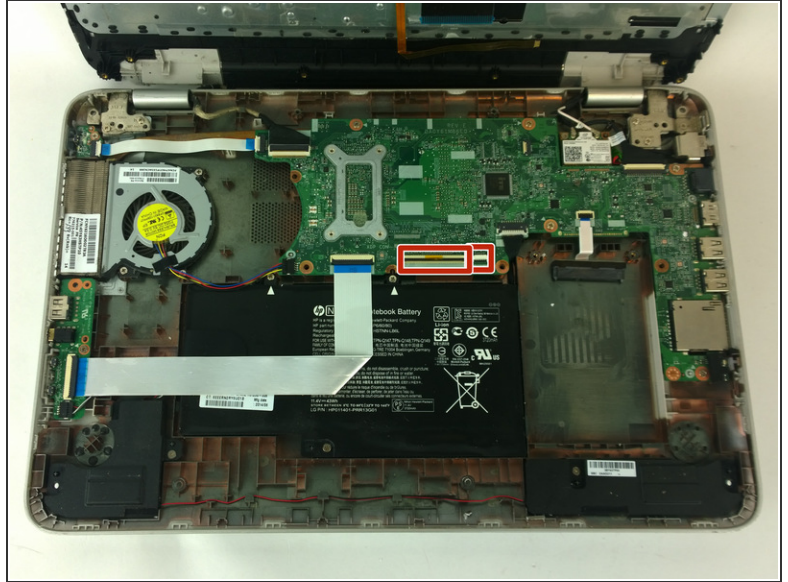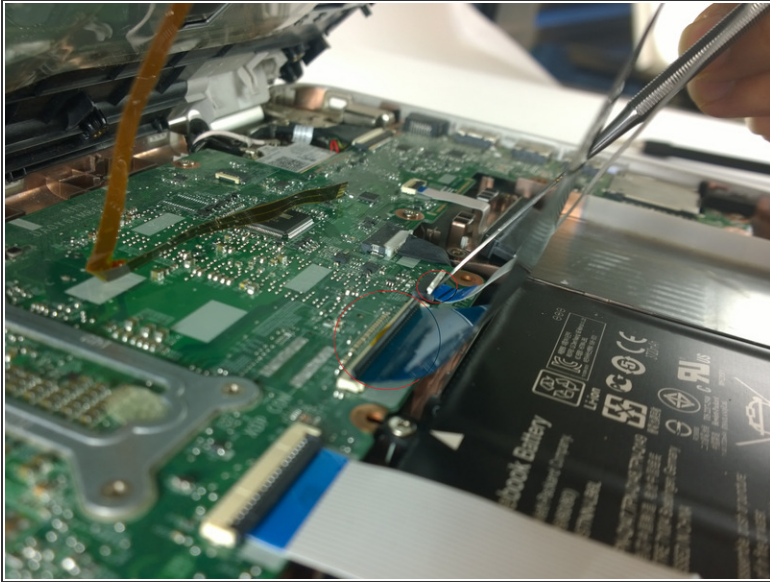

- Use the spudger to detach the two ribbons from their connectors.

 The regular black nylon spudger should be used whenever possible, especially around sensitive internal components.

## Step 6 — Hard Drive



- Gently remove hard drive from its connector.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-17 05:12:41 AM.